



LG 1010 LCD Screen Replacement

How to replace a broken LCD screen in a LG 1010 Cellular phone.

Written By: Nicholas Schmidt





TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)
 - T6 Torx Screwdriver (1)
-

Step 1 — Battery



- Turn off the cell phone and place face down on a flat surface.

Step 2



- While sliding the gray tab up, lift battery up and away from the cell phone.

Step 3



- Remove battery and set aside.

Step 4 — Front Cover




- Use a Spudger to remove the two front plastic covers to reveal screws.

Step 5



- Remove two screws using a Torx T6 screwdriver.

Step 6

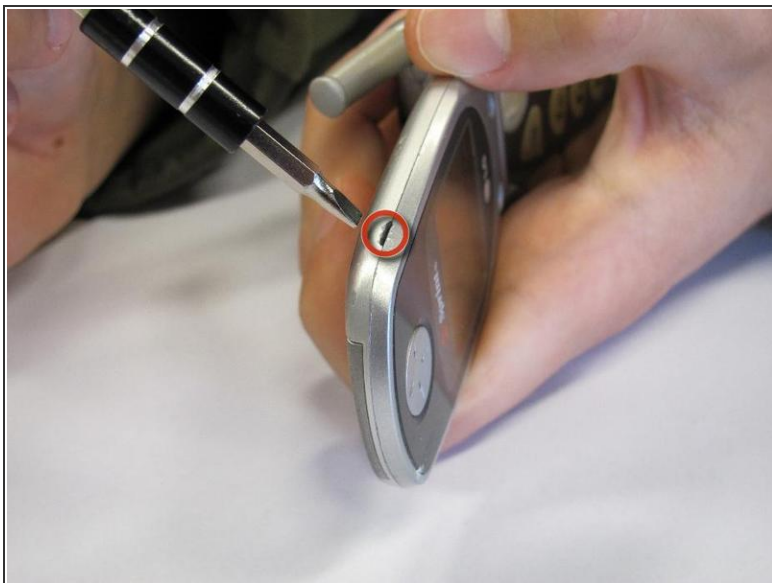


- Pry off screen front cover with a Small Flathead Screwdriver.

Step 7



- Insert Small Flathead Screwdriver into the hinge and separate hinge connection.

Step 8

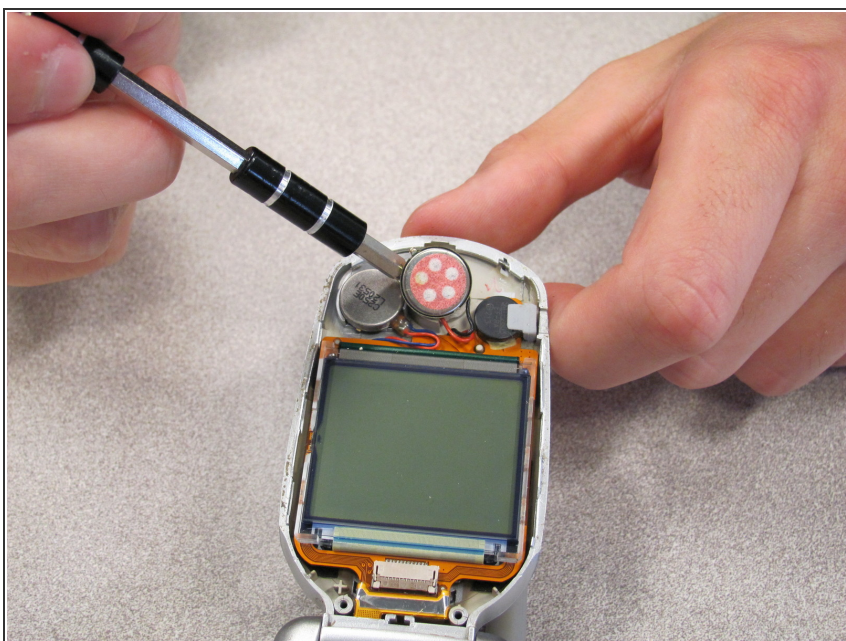

- Pry off the speaker which is glued on to the front cover using a Small Flathead Screwdriver.

Step 9




- Remove remaining portion of the front case from the flexible circuit board.
- ⚠ Do not attempt to remove the LCD board at this time, as it is attached to the rear panel assembly.

Step 10 — Back Cover



- Unscrew the four screws on the back case using a T6 Torx Screwdriver.

Step 11

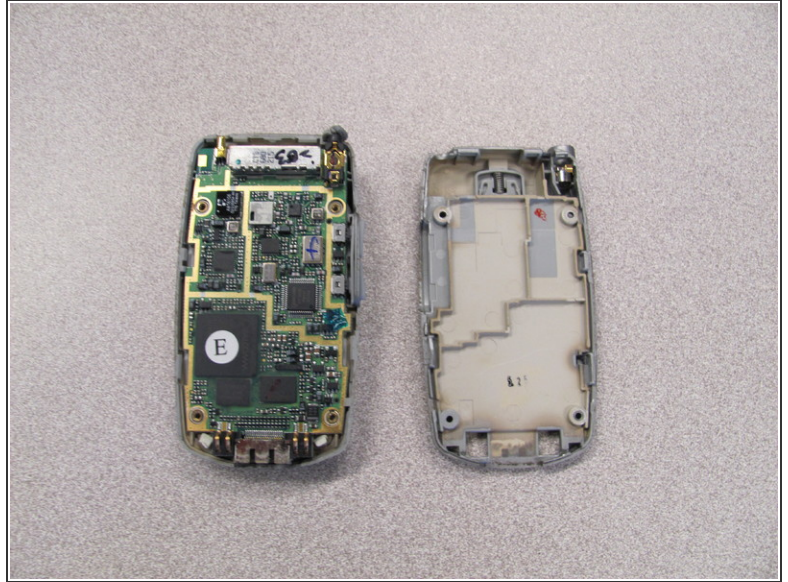

- Pull the back cover straight off the phone using your thumb and forefinger.

Step 12 — Keypad




- Pry off circuit board with a flathead screwdriver.

Step 13




- Pull out flexible keypad.

Step 14 — LCD Screen

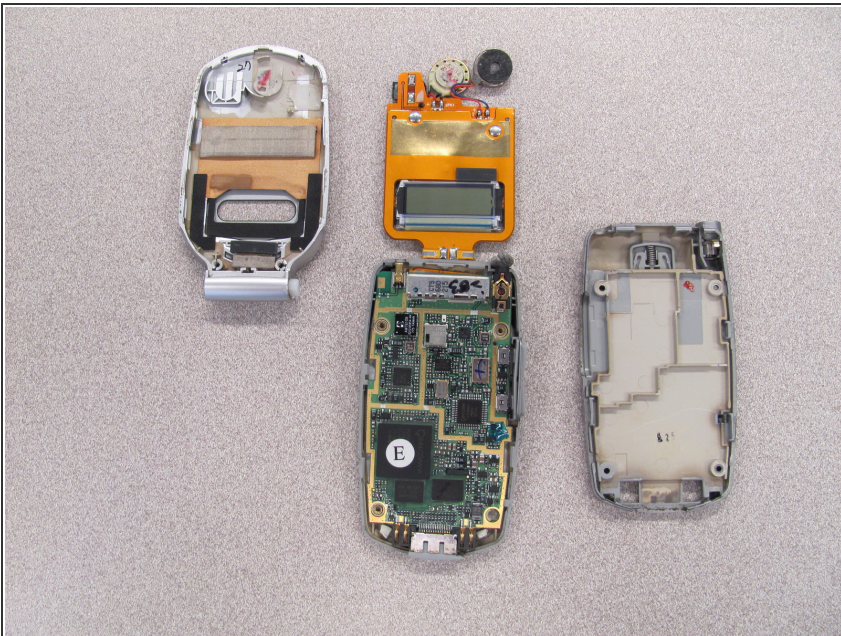

- The phone should now look like the picture to the left.

Step 15

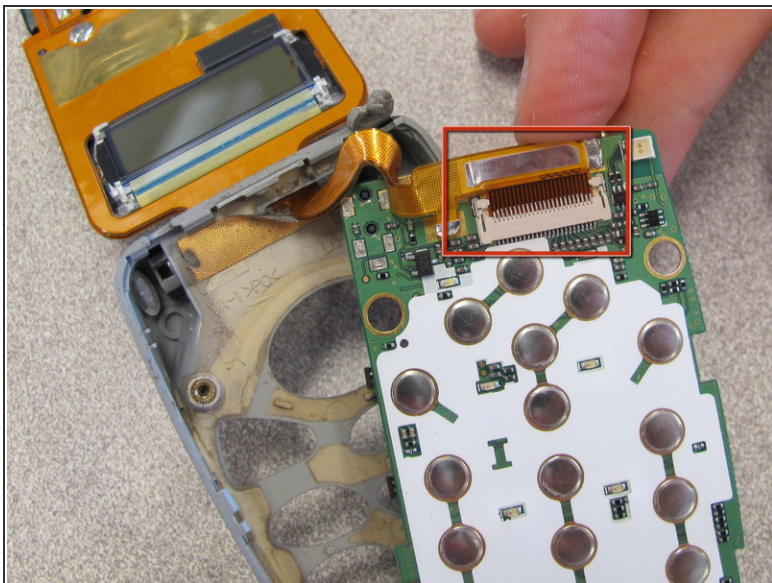

- Locate and detach the ribbon cable from circuit board.

Step 16



- Remove the LCD Screen from the phone case and replace with a new LCD screen.

To reassemble your device, follow these instructions in reverse order.

